

# Talking Picture Frame with Travel Alarm Clock

63-982

OWNER'S MANUAL — Please read before using this equipment.

## CONTENTS

Preparation .....	1
Removing the Battery .....	1
Insulation Strips .....	1
Framing a Picture .....	2
Operation .....	2
Recording and Playing a Message .....	2
Setting the Time .....	3
Setting the Alarm .....	3
Care .....	4
Replacing Batteries .....	4
Service and Repair .....	4
Specifications .....	4


### ! IMPORTANT !

If an icon appears at the end of a paragraph, go to the box on that page with the corresponding icon for pertinent information.

⚠ — Warning	! — Important
⚡ — Caution	💡 — Hint
📝 — Note	

Your RadioShack Talking Picture Frame combines a clock with a recorder that uses the latest IC recording technology to record sounds without tape or moving parts.

 You can easily see what time it is and record an important message as well. Then, at the time you set, you can have the recorder play the message automatically. The picture frame lets you record a new message as many times as you like.

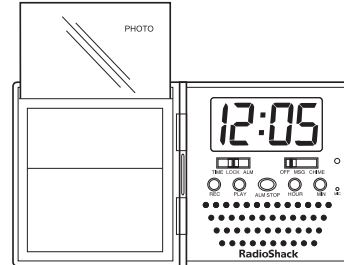

**Large Display** — lets you easily see the time and alarm settings.

**Built-In Photo Frame** — holds a favorite picture.

**12-hour Format Clock with PM Indicator** — lets you quickly set the time and alarm.

**10-Second Recorder** — plays a prerecorded message you set.

**Clock Alarm** — alerts you with a repeating series of four beeps or plays your prerecorded message at the set alarm time.

**Compact Size** — makes it handy to pack or carry wherever you go.

## PREPARATION

### REMOVING THE BATTERY INSULATION STRIPS

Your picture frame comes with four Type 357A button-cell batteries already installed. Before you can use the picture frame, you must remove the protective insulation sheet from inside the battery compartment.



**RadioShack®**  
www.radioshack.com<sup>SM</sup>

© 2002 RadioShack Corporation.  
All Rights Reserved.

RadioShack and RadioShack.com are trademarks  
used by RadioShack Corporation.

### Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.


This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street,  
6th Floor, Fort Worth, TX 76102

12/99


1. Use a Phillips screwdriver to remove the screw from the battery compartment cover.
2. Slide off the cover in the direction of the arrow.
3. Grasp the plastic sheet and gently pull it off.
4. Make sure the batteries are in place, then replace the cover and secure it with the screw.

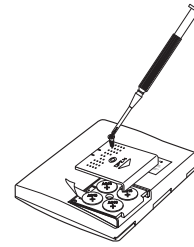

## FRAMING A PICTURE

Select a picture that is thin enough to fit in the frame's slot. Trim the picture to a width of  $2\frac{3}{8}$  inches (60 mm) and a height of  $2\frac{5}{8}$  inches (66 mm), then insert it from the top of the frame and push it down until it touches the bottom of the frame.

To remove the picture, slide it up until it clears the upper edge frame opening.

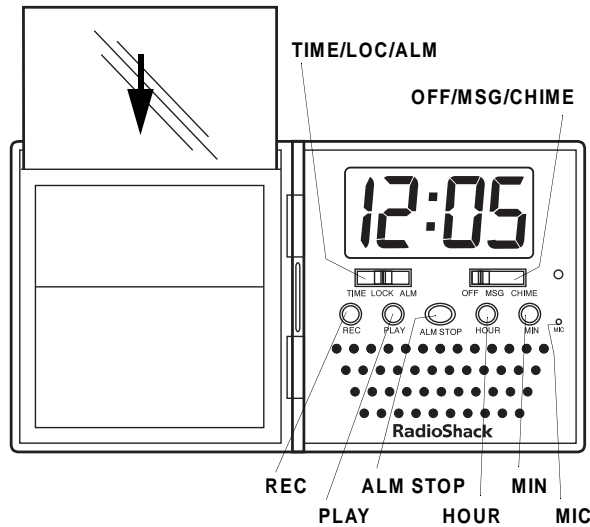

## OPERATION

### RECORDING AND PLAYING A MESSAGE

You can record a message up to 10 seconds long.

1. Open the cover.
2. Use a sharp object such as a straightened paper clip to hold down **REC**. The red indicator lights. Speak into **MIC** from about 10 inches away in a normal voice.

(Speaking too closely to **MIC** distorts your recording). The red indicator remains on up to 10 seconds while recording.

3. After 10 seconds, the recorder stops recording automatically. To stop recording sooner, release **REC**.
4. To record a new message, repeat Steps 1—3. The new message replaces the old one.
5. To listen to the message, press **PLAY**.

## SETTING THE TIME


The clock uses a 12-hour, AM/PM format. **PM** appears at the left of the display for PM hours.

1. Slide **TIME/LOCK/ALM** to **TIME**.
2. Repeatedly press (or hold down) **HOUR** to set the current hour.
3. Repeatedly press (or hold down) **MIN** to set the current minute.
4. Slide **TIME/LOCK/ALM** to **LOCK**.


## SETTING THE ALARM

1. Slide **TIME/LOCK/ALM** to **ALM**. The currently set alarm time and **AL** appear.
2. Repeatedly press **HOUR** then **MIN** until the desired alarm time appears.
3. *To set the clock so it plays your prerecorded message at the set alarm time, slide **OFF/MSG/CHIME** to **MSG**.*

*To set the clock so it beeps at the set alarm time, slide **OFF/MSG/CHIME** to **CHIME**.*



 appears to show that the alarm is ready to sound at the set time.

4. Slide **TIME/LOCK/ALM** to **LOCK** once you have made all your selections.



To turn off the alarm, slide **OFF/MSG/CHIME** to **OFF**.  disappears.

### **NOTES**

- To check the alarm setting at any time, press **HOUR** or **MIN** when **TIME/LOCK/ALM** is set to **LOCK**.
- When the alarm you have chosen sounds, the clock either repeatedly announces the message or beeps for 1 minute, then turns off. To silence the alarm sooner, press **ALM STOP**.


**WARNINGS**


- Dispose of old batteries promptly and properly. Do not burn or bury them.
- Keep button-cell batteries away from children. Swallowing a button-cell battery can be fatal.




**CAUTIONS**


- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- If you do not plan to use the picture frame for a month or more, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.

## CARE

Keep the picture frame dry; if it gets wet, wipe it dry immediately. Use and store the picture frame only in normal temperature environments. Handle the picture frame carefully; do not drop it. Keep the picture frame away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

## REPLACING BATTERIES

When the recorded sound weakens or the picture frame stops operating properly, replace the batteries with RadioShack batteries.  

1. Use a Phillips screwdriver to remove the screw from the battery compartment cover, then slide off the cover in the direction of the arrow.
2. Use the tip of a pencil or other non-metallic sharp object to remove the old batteries, then insert fresh batteries in the compartment with their positive (+) sides up.
3. Replace the cover and secure it with the screw.

## SERVICE AND REPAIR

If your picture frame is not performing as it should, take it to your local RadioShack store for assistance. Modifying or tampering with the picture frame’s internal components can cause a malfunction and might invalidate its warranty.

## SPECIFICATIONS

Power Source .....	Four Type 357A Button-Cell Batteries
Battery Life (Typical) .....	About 1 Year
Recording Time.....	10 Seconds (Maximum)
Operating Temperature .....	32° to 104° F (0 ° to 40° C)
Dimensions .....	3 <sup>3</sup> / <sub>32</sub> × 2 <sup>27</sup> / <sub>32</sub> × 2 <sup>3</sup> / <sub>32</sub> Inches (79 × 72 × 18 mm)
Weight .....	2.54 oz (72 g)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.